OLIGHT

USER MANUAL

Seeker 3 Pro

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

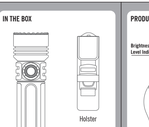

SPECIFICATIONS

TURBO 1700lm 30min
HIGH 1000lm 1.5h
MED 300lm 5.5h
LOW 50lm 36h
Strobe 1000lm 1.5h

TURBO	HIGH	MED	LOW	MOON
1700lm	1000lm	300lm	50lm	1lm
250m	170m	85m	25m	2m
1.5m	15.625m	2.5m	0.25m	0.25m
30min	1.5h	5.5h	36h	36h
6.05-20°/138.38m		7.05m/200g (Including Battery)		
6.05-20°/138.35mm				

** All above specifications are test results based on ANSI/NEMA FL1-2009 Standard. The tests are performed using the battery included in the flashlight.*
Note: The maximum output brightness will decrease as the battery voltage decreases.

PRODUCT OVERVIEW

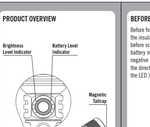

INDICATORS ON BOTH SIDES

>90%	90%~75%
75%~50%	50%~35%
35%~25%	25%~5%
<5%	5%~0%

AVAILABLE BATTERIES

• 1 x customized 5000mAh 21700 rechargeable lithium battery

USB MAGNETIC CHARGING CABLE -- MCC3

Parameter	Specification
Charging cable	USB type A - magnetic charging connector, length: 0.3m
Input	USB A - Type-DC 5V 2A
Charging parking	CC&CV
Maximum charging current	1A
Voltage of fully charged battery	4.2V (± 0.05V)
Time to fully charge	4.5 hours (for reference only. When the USB port power capacity, the charging time will be longer than the power capacity, the charging time will be longer than the rated charging time)
Charge indication	Green: Charging Green: Full (over 95%) or disconnected from the charger

CHARGING

The flashlight arrives in locked mode for shipping purposes. To unlock, please rotate the knob switch clockwise for 2 seconds. The corresponding indicators will light up when you have unlocked the switch successfully.

NOTE. While turning on, if the battery power is less than 10%, the lowest indicator on the right side will glow red.

PROXIMITY INSTRUCTION FUNCTION

1. When the light is on and set at Level 3 or higher brightness, if the hand, pocket, or other object detects an obstruction nearby, the brightness will automatically reduce. While in this state, the stepless dimming by rotating the knob switch is invalid. The brightness will restore the previous brightness when the obstruction is gone.



2. To turn off the proximity sensor, please quickly knock twice on the proximity sensor the flashlight body from overheating and hurting the users' hands.
• Please keep the charging port clean and dry before charging to prevent the damage.
• If the battery needs to be changed, please store it carefully away from the conductive metal.
• If the light is about to be put aside for a long time or be transported, please unscrew the tailcap and remove the battery to cut off the circuit.

NOTICE

• The light will dim brightness automatically when it will high temperature to protect the

EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the use or misuse of this product inconsistent with the warnings in the manual, including but not limited to using the product inconsistent with the recommended lockout mode.

DANGER

• DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.

• Keep out of reach of children.

• DO NOT cover the flashlight when it is on. The built-up heat may cause objects to burn or even result in unexpected disasters.

• DO NOT use the rechargeable battery without battery protection board and broken.

• DO NOT immerse the flashlight in seawater or other corrosive media as it will entire damage the charging port.

• DO NOT take out or use other chargers to charge the customized battery, it may cause damage.

WARNING

• DO NOT activate high mode repeatedly under high temperature to prevent the flashlight body from overheating and hurting the users' hands.

• Please keep the charging port clean and dry before charging to prevent the damage.

• If the battery needs to be changed, please store it carefully away from the conductive metal.

• If the light is about to be put aside for a long time or be transported, please unscrew the tailcap and remove the battery to cut off the circuit.

NOTICE

• The light will dim brightness automatically when it will high temperature to protect the

ATTENTION

* The built-in screw nut is NOT work if it is blocked by water or dirt on the threads. Please clean the threads before use if the switch works properly.
* Please protect the surface of the front lens carefully. It may reduce the light output if it has scratches on the front lens.

CONTENTS

(EN) English 01
(CN) 简体中文 02
(FI) Finnish 03
(NO) Norwegian 04
(SV) Swedish 05
(NL) Nederlands 06
(PL) Polska 08
(DE) Deutsch 09
(HU) Magyarország 11
(RU) Русский 12
(ES) Español 13
(RO) Romanesc 14
(UA) Українська 15
(JP) 日本語 16
(KR) 한국어 19
(TH) ไทย 20
(FR) Français 21
(IT) Italia 22
(SK) Slovenskýjazyk 24
(CZ) Český 25

(EN) English

HOW TO OPERATE

LOCKOUT/UNLOCK: The knob switch will be locked out automatically. If no operation is made within 30 seconds after the light is off. In the locked mode, single click the knob switch will not turn on the light and the battery indicator will indicate the battery level. To unlock, please rotate the knob switch over 90 degrees, whenever indicators around it will be on for 3 seconds.

IN THE UNLOCKED STATE:

ON/OFF: Single click the knob switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. (The high mode and the strobe mode will be excluded.) Quickly click twice on the knob switch to turn on the maximum brightness of the light in turbo mode. The medium mode and above brightness will be stepped down automatically after one minute when the light is turned off.)

BRIGHTNESS ADJUSTMENT: When the light is on, press and hold the knob switch and it will, starting from the present brightness level, automatically cycle through Low, Medium, and High mode. The mode is selected when the knob switch has been released. (Please note: moonlight and turbo are not in the automatic cycle.)

MOONLIGHT: When the light is off, press and hold the knob switch for two seconds and release after 3 seconds after dimming the brightness automatically. The light will enter into the corresponding mode. Turn off the light can restash the proximity sensor.

TURBO AND STROBE: Quickly double click the knob switch to enter into Turbo, double click again to turn off. The medium mode and above brightness will be memorized as medium mode.

STROBE: Quickly triple click the knob switch to activate strobe mode. To quit this mode, single click to press and hold for 2 seconds.

REMOVE THE INSULATING FILM: When the light is on, rotate the knob switch counterclockwise to the end, the insulating film will be tightened and pop out. The corresponding brightness level will glow the brightness control knob switch to remind when the brightness reaches its present highest brightness.

CONSTANT BRIGHTNESS CONTROL (STEPLESS DECREASING): When the light is on and locked in the moonlight mode, rotate the knob switch counterclockwise to decrease the brightness level from the lowest. The corresponding brightness levels will glow the brightness control knob switch to remind when reaching the lowest brightness.

CONSTANT BRIGHTNESS CONTROL (STEPLESS INCREASING): When the light is on and locked in the moonlight mode, rotate the knob switch clockwise to increase the brightness level from the lowest. The corresponding brightness levels will glow the brightness control knob switch to remind when the brightness reaches its present highest brightness.

STROBE/SOS: A longer press (approximately 2 seconds) from the strobe mode switches to SOS mode. To quit this mode, single click to press and hold for 2 seconds.

TEMPORARY: Loosen the knob switch to activate strobe. Tighten the knob switch to quit.

CLEANING: Unscrew the knob switch to remove the O-ring and clean the O-ring and the knob switch.

ATTENTION: Please keep the knob switch clean and dry to prevent the knob switch from being stuck.

(HU) Magyarország

A HASZNÁLAT MÓDJA

LEZÁRÁS / FELOLDÁS: A kapcsoló a lámpa kikapcsolása után automatikusan reálló állapotba kerül, amennyiben 30 másodperben belül semmilyen műveletet sem végzünk vele. A kézi állapotban lévő lámpa a kapcsoló egyszeri megnyomásakor nem kapcsolja be a lámpát, de az akkumulátor töltöttségi szintje kerül kijelzésre. A feloldáshoz forgassa el a kapcsolót több mint 90 fokkal. Ekkor a kapcsoló körül lévő jelzőpontok 3 másodpercre bekapcsolnak.

FELOLDOTT ÁLLAPOTBAN:

BE / Ki: A lámpa be- és kikapcsolása a kapcsoló egyszeri megnyomásával történik. A lámpa bekapcsolása az utolsó beállított fényerőszintre történik. (A turbó és a villogó fényerőszint kivételével.) Ha a lámpa bekapcsolt állapotban van, a kapcsoló kétszeri gyors megnyomásával a kapcsoló kétszer gyors egymás utáni megnyomásával a maximális fényerőszint lép ki az akkumulátor töltöttsége szerint kapcsolva kerül. A fenntartási fordulat a kapcsolót tíztől mint 90 fokkal. Ekkor a kapcsoló körül lévő jelzőpontok 3 másodpercre bekapcsolnak.

FÉNYERŐ/FORGATÓ MEGVILÁGÍTÓZÁSA: A mód az utolsóra beállított fényszintje lép ki a kapcsoló nyomva tartásakor az akkuütés fényerőszintjétől indulva automatikusan végigkapcsol az alacsony és közepes és erős fényerőfokozatokon. A kívánt fényszint elérésekor a kapcsoló elengedésével a fényszint beállítva van. A fényerőszint kiválasztásakor a kapcsoló kétszer gyors egymás utáni megnyomásával a kapcsoló kétszer gyors egymás utáni megnyomásával a maximális fényerőszint lép ki az akkumulátor töltöttségszintjétől. Egyszeri villanás a jelző, kétszeri villanás a fényszint. Jelzőfény beállítása állapot jelző. A villanó beállítás szintén automatikusan kikapcsol.

HÁTSÓ FÉNYERŐ/FORGATÓ MEGVILÁGÍTÓZÁSA: A kapcsoló egyszeri megnyomásával a lámpa bekapcsolása és kikapcsolása szintén a legutóbbi beállított fényerőszintre kerül. A kapcsoló kétszeri gyors megnyomásával a maximális fényerőszint lép ki az akkumulátor töltöttségszintjétől. Egyszeri villanás a jelző, kétszeri villanás a fényszint. Jelzőfény beállítása állapot jelző. A villanó beállítás szintén automatikusan kikapcsol.

HOLDFÉNY: A kapcsoló a lámpa kikapcsolása alatt legalább kétszer gyors megnyomásával a lámpa bekapcsolása szintén a legutóbbi beállított fényerőszintre kerül. A kapcsoló kétszeri gyors egymás utáni megnyomásával a maximális fényerőszint lép ki az akkumulátor töltöttségszintjétől. Egyszeri villanás a jelző, kétszeri villanás a fényszint. Jelzőfény beállítása állapot jelző. A villanó beállítás szintén automatikusan kikapcsol.

TURBÓ ÉS STROBO: Gyors kétszeri megnyomásával a kapcsoló a turbó fényerőszintre kerül. A kapcsoló ismételt gyors kétszeri megnyomásával a lámpa kikapcsolása szintén a legutóbbi beállított fényerőszintre kerül.

STROBOSZKÓP: A kapcsoló gyors háromszori megnyomásával a lámpa a stroboszkóp üzemmódba lép. A stroboszkóp üzemmód a kapcsoló egyszeri megnyomásával és legalább kétszer gyors megnyomásával szüntethető meg.

A KAPCSOLÓ ÓRAMUTATÓ JÁRÁSÁVAL MEGEGYEZŐ IRÁNYÚ ELFORGATÁSA (FOKOZATMENTES FÉNYCSÖKKENÉS): A lekapcsolt állapotban lévő lámpán a kapcsoló óramutató járásával ellentétes irányú elforgatásával csökkenthető a fényerő akszony fokozatra. A fényerőszabályzó kihúzott gyűrű az fokozatosan a legkisebb fokozat elérésekor. A lámpa holdfény üzemmódban történő bekapcsolásakor a kapcsoló óramutató járásával megegyező irányú elforgatásával lehetséges az alacsony fokozatok beállítása. A fényerőszabályzó kihúzott gyűrű az fokozatosan a legkisebb fokozat elérésekor. A lámpa holdfény üzemmódban történő bekapcsolásakor a kapcsoló körüli jelzőpontok 3 másodpercre bekapcsolnak.

ÉJSZAKI FÉNY: A kapcsoló a lámpa kikapcsolása alatt legalább kétszer gyors megnyomásával a lámpa bekapcsolása szintén a legutóbbi beállított fényerőszintre kerül. A kapcsoló kétszeri gyors egymás utáni megnyomásával a maximális fényerőszint lép ki az akkumulátor töltöttségszintjétől. Egyszeri villanás a jelző, kétszeri villanás a fényszint. Jelzőfény beállítása állapot jelző. A villanó beállítás szintén automatikusan kikapcsol.

STROBOSZKÓP: A kapcsoló gyors háromszori megnyomásával a lámpa a stroboszkóp üzemmódba lép. A stroboszkóp üzemmód a kapcsoló egyszeri megnyomásával és legalább kétszer gyors megnyomásával szüntethető meg.

A KAPCSOLÓ ÓRAMUTATÓ JÁRÁSÁVAL MEGEGYEZŐ IRÁNYÚ ELFORGATÁSA (FOKOZATMENTES FÉNYERŐSZINTEK): A lekapcsolt állapotban lévő lámpán a kapcsoló óramutató járásával megegyező irányú elforgatásával lehetséges a fényerő a legkisebb fokozatot meghaladó fokozatok. A fényerőszabályzó kihúzott gyűrű az fokozatosan a legkisebb fokozat elérésekor. A lámpa holdfény üzemmódban történő bekapcsolásakor a kapcsoló körüli jelzőpontok 3 másodpercre bekapcsolnak.

IDŐZÍTŐ: A Seeker 3 Pro egy hosszú (15 perces) és egy rövid (30 perces) időzítőt tartalmaz. Ha az időzítő be van kapcsolva, a lámpa az utolsóban kikapcsolás szerint lép ki. Szükséges esetben az időzítő kikapcsolása szintén egy hosszú kétszeri villanás a fényerőszabályzó körül. Ez a fényerőszabályzó körüli jelzőpontok 3 másodpercre bekapcsolnak.

TÚLMELEGEDÉS ELLEN: A lámpa a túlmelegedés ellen automatikusan csökkenti a fényerőt.

ÉJSZAKI FÉNY: A lámpa kikapcsolt állapotban van, a kapcsoló hosszú megnyomásával a lámpa az éjszakai fényre kapcsolódik.

Fontos megjegyzés: Ha a lámpa bekapcsolt állapotban van, a kapcsoló hosszú megnyomásával a lámpa kikapcsolódik.

Figyelmeztetés: Ne szorítsa a kapcsolót a szemhez, mert ez ideiglenes vagy tartós szemkárosodást okoz